ABBREVIATIONS

The following abbreviations are used in this manual.

A/C = Air Conditioner

A/T = Automatic Transmission ABS = Anti-Lock Brake System

ACIS = Acoustic Control Induction System

BA = Brake Assist COMB. = Combination

DLC3 = Data Link Connector 3

ECT = Electronic Control Transmission

ECU = Electronic Control Unit EFI = Electronic Fuel Injection ESA = Electronic Spark Advance

ETCS-i = Electronic Throttle Control System-intelligent

EVAP = Evaporative Emission FFC = Flexible Flat Circuit HID = High Intensity Discharge

IC = Integrated Circuit J/B = Junction Block

LED = Light Emitting Diode

LH = Left-Hand

LHD = Left-Hand Drive

M/T = Manual Transmission

MPX = Multiplex
O/D = Overdrive
R/B = Relay Block
RH = Right-Hand

RHD = Right-Hand Drive

S/D = Sedan Type

SRS = Supplemental Restraint System

SW = Switch

TEMP. = Temperature
TRC = Traction Control

VSC = Vehicle Stability Control VSV = Vacuum Switching Valve

W/G = Wagon Type

w/ = With w/o = Without

^{*} The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.