

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 9	Buckle SW RH (w/ Power Seat)	90980-10825
A 2	A/C Condenser Fan Motor (1G-FE)	90980-10928		Buckle SW RH (w/o Power Seat)	90980-11212
	A/C Condenser Fan Motor (2JZ-GE)	90980-11410	B10	Buckle SW LH and Seat Belt Warning Occupant Detection Sensor	90980-11212
A 3	A/C Magnetic Clutch	90980-11271	B11	Buckle SW RH and Seat Belt Warning Occupant Detection Sensor	90980-11471
A 7	ABS Speed Sensor Front LH	90980-11002	B12	Back Door Courtesy SW and Opener Motor	90980-10795
A 8	ABS Speed Sensor Front RH		B13	Back Door Opener Relay	82660-53010
A 9	Accel Position Sensor (1G-FE)	90980-10711	B14	Back Door Opener SW	90980-10860
	Accel Position Sensor (2JZ-GE)	90980-11150	C 1	Camshaft Position Sensor	90980-10947
A10	Airbag Sensor Front LH	90980-11856	C 2	Camshaft Timing Oil Control Valve	90980-11162
A11	Airbag Sensor Front RH		C 4	Crankshaft Position Sensor	90980-10947
A12	Alternator (1G-FE)	90980-09213	C 5	Center Airbag Sensor Assembly	90980-11873
	Alternator (2JZ-GE)	90980-09363	C 6	Center Airbag Sensor Assembly	90980-11872
A13	Alternator	90980-11349	C 7	Center Airbag Sensor Assembly	90980-11871
A14	A/C Control Assembly	90980-11971	C 8	Cigarette Lighter	90980-10760
A15	A/C Control Assembly	90980-11973	C 9	Cigarette Lighter Illumination	90980-11148
A16	A/C Room Temp. Sensor	90980-10825	C10	Combination Meter	90980-11915
A17	A/C Solar Sensor	90980-11918	C11	Combination Meter	90980-11911
A24	Air Inlet Control Servo Motor	90980-11165	C12	Combination SW	90980-11594
A25	Air Mix Control Servo Motor		C13	Combination SW	90980-11616
A26	Air Vent Mode Control Servo Motor		C14	Combination SW (Australia w/ VSC)	90980-11671
A27	Airbag Squib (Front Passenger Airbag Assembly)	90980-11886		Combination SW (Australia w/o VSC)	90980-11595
A28	Airbag Squib (Steering Wheel Pad)	90980-10850		Combination SW (Europe)	90980-11672
A29	Antenna Amplifier	90980-10871	C15	Curtain Shield Airbag Squib LH	90980-11886
A30	Ashtray Illumination	90980-10825	C16	Curtain Shield Airbag Squib RH	
A31	Automatic Light Control Sensor	90980-11107	D 1	Daytime Running Light Relay	90980-10807
A32	ABS Speed Sensor Rear LH (S/D)	90980-11060		Short Connector	
	ABS Speed Sensor Rear LH (W/G)	90980-10859	D 2	Double Locking ECU	90980-10803
A33	ABS Speed Sensor Rear RH (S/D)	90980-11299	D 3	Diode (A/C)	90980-11251
	ABS Speed Sensor Rear RH (W/G)	90980-10824	D 4	DLC3	90980-11665
A34	A/C Magnetic Clutch and Lock Sensor	90980-11016	D 5	Door Courtesy Light Front LH	90980-11148
A35	ABS & BA & TRC Actuator	90980-12020	D 6	Door Courtesy Light Front RH	
A36	ABS & BA & TRC & VSC Actuator		D 7	Door Courtesy SW Front LH	90980-10871
A37	Air Flow Meter	90980-11317	D 8	Door Courtesy SW Front RH	
B 1	Back-Up Light SW	90980-11142	D 9	Door Courtesy SW Rear LH	
B 2	Brake Fluid Level Warning SW	90980-11207	D10	Door Courtesy SW Rear RH	
B 3	Blower Motor	90980-10214	D11	Door Key Lock and Unlock SW Front LH	90980-11858
B 4	Blower Motor Controller	90980-11167		Door Lock Detection SW Front LH	
B 5	Blower Motor Controller	90980-11579		Door Lock Motor Front LH	
B 6	Body ECU	90980-11971	D12	Door Key Lock and Unlock SW Front RH	
B 7	Body ECU	90980-11911		Door Lock Detection SW Front RH	
B 8	Buckle SW LH (w/ Power Seat)	90980-10825		Door Lock Motor Front RH	
	Buckle SW LH (w/o Power Seat)	90980-11212			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number	
D13	Door Lock Detection SW Front LH	90980-11150	E15	Engine and ECT ECU	90980-12144	
	Door Lock Motor Front LH		F 1	Front Clearance Light LH (w/ HID)	90980-11156	
D14	Door Lock Detection SW Front RH		F 1	Front Clearance Light LH (w/o HID)	90980-11162	
	Door Lock Motor Front RH		F 2	Front Clearance Light RH (w/ HID)	90980-11156	
D15	Door Lock Detection SW Rear LH			F 2	Front Clearance Light RH (w/o HID)	90980-11162
	Door Lock Motor Rear LH		F 3	Front Fog Light LH	90980-11096	
D16	Door Lock Detection SW Rear RH			F 3		Front Fog Light RH
	Door Lock Motor Rear RH		F 4	Front Side Turn Signal Light LH	90980-11162	
D17	Diode (Luggage Compartment)			F 4		Front Side Turn Signal Light RH
D18	Door Lock Detection SW Front LH		90980-10799	F 5	Front Side Turn Signal Light LH	90980-11019
	Door Lock Motor Front LH			F 5	Front Side Turn Signal Light RH	
	Double Lock Motor Front LH			F 6	Front Turn Signal Light LH	90980-11019
	Double Lock Position SW Front LH	F 6		Front Turn Signal Light RH		
D19	Door Lock Detection SW Front RH	F 7		Front Window Deicer	90980-11295	
	Door Lock Motor Front RH	F 8		Front Wiper Motor	90980-11599	
	Double Lock Motor Front RH	F 9		Front Door Speaker LH	90980-10935	
	Double Lock Position SW Front RH	F 9		Front Door Speaker RH		
D20	Door Lock Detection SW Rear LH	F 10		Front Door Tweeter Speaker LH	90980-11013	
	Door Lock Motor Rear LH	F 10		Front Door Tweeter Speaker RH		
	Double Lock Motor Rear LH	F 11		Fuel Pump	90980-11077	
	Double Lock Position SW Rear LH	F 11		Fuel Sender		
D21	Door Lock Detection SW Rear RH	F 12	Fuel Sender (Sub)	90980-11140		
	Door Lock Motor Rear RH	F 12	Front Side Marker Light LH	90980-11162		
	Double Lock Motor Rear RH	F 12	Front Side Marker Light RH			
	Double Lock Position SW Rear RH	F 13	Fuel Pump Resistor	90980-10901		
E 1	ECT Solenoid (1G-FE)	90980-10891	G 1	Glove Box Light	90980-11098	
	ECT Solenoid (2JZ-GE)	90980-11151	H 1	Headlight Beam Level Control Actuator LH (w/ HID)	90980-11144	
E 2	Engine and ECT ECU (A/T)	90980-11638		H 1	Headlight Beam Level Control Actuator LH (w/o HID)	90980-11016
	Engine ECU (M/T)		H 2	Headlight Beam Level Control Actuator RH (w/ HID)	90980-11144	
E 3	Engine and ECT ECU (A/T)	90980-11637		H 2	Headlight Beam Level Control Actuator RH (w/o HID)	90980-11016
	Engine ECU (M/T)		H 3	Headlight Cleaner Control Relay	90980-10939	
E 4	Engine and ECT ECU (A/T)	90980-11586	H 4	Headlight Cleaner Motor	90980-11410	
E 5	Engine and ECT ECU (A/T)	90980-11476	H 5	Headlight LH (High)	90980-11095	
	Engine ECU (M/T)		H 6	Headlight LH (Low)	90980-11096	
E 6	Engine and ECT ECU (A/T)	90980-11421	H 7	Headlight RH (High)	90980-11095	
	Engine ECU (M/T)		H 8	Headlight RH (Low)	90980-11096	
E 7	Engine Hood Courtesy SW	90980-11189	H 9	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-11028	
E 8	Engine Oil Level Sensor (1G-FE)	90980-10532	H10	Heated Oxygen Sensor (Bank 2 Sensor 1) (1G-FE)	90980-11028	
	Engine Oil Level Sensor (2JZ-GE)	90980-11235		H10	Heated Oxygen Sensor (Bank 2 Sensor 1) (2JZ-GE)	90980-10869
E 9	Engine Oil Pressure SW	90980-11363	H11	Horn LH	90980-10619	
E10	ECT Pattern Select SW	90980-10933	H12	Horn RH		
E11	Engine and ECT ECU	90980-12142	H13	Headlight Beam Level Control SW	90980-10797	
E12	Engine and ECT ECU	90980-12146				
E13	Engine and ECT ECU	90980-12143				
E14	Engine and ECT ECU	90980-12145				

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
H14	Headlight Cleaner SW	90980-11013	J 5	Junction Connector	90980-10976
H15	Heated Oxygen Sensor (Bank 1 Sensor 2) (1G-FE)	90980-11028	J 6	Junction Connector (LHD)	82824-16060
	Heated Oxygen Sensor (Bank 1 Sensor 2) (2JZ-GE)	90980-10869		Junction Connector (RHD)	82824-10020
H16	High Mounted Stop Light (Bulb Type)	90980-11148	J 7	Junction Connector	82824-10030
	High Mounted Stop Light (LED Type)	90980-11967	J 8	Junction Connector (LHD)	82824-16060
H17	Headlight Control ECU LH	90980-11255		Junction Connector (RHD)	82824-10030
H18	Headlight Control ECU RH		J 9	Junction Connector	82824-16060
H19	Height Control Sensor Front LH	90980-11016	J11	Junction Connector (LHD)	82824-10020
H20	Headlight Beam Level Control ECU	90980-11469		Junction Connector (RHD)	82824-10010
H21	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028	J12	Junction Connector	82824-10010
H22	Height Control Sensor Rear LH	90980-11860	J13	Junction Connector	90980-11542
I 1	Ignition Coil and Igniter No.1	90980-11885	J14	Junction Connector	
	Ignition Coil and Igniter No.2		J15	Junction Connector	
	Ignition Coil and Igniter No.3		J16	Junction Connector	
	Ignition Coil and Igniter No.4		J17	Junction Connector	90980-10976
	Ignition Coil and Igniter No.5		J18	Junction Connector	90980-11915
	Ignition Coil and Igniter No.6		J19	Junction Connector	90980-11542
I 7	Injector No.1 (1G-FE)	90980-11875	J20	Junction Connector	
	Injector No.1 (2JZ-GE)	90980-11153	K 1	Knock Sensor 1	90980-11166
I 8	Injector No.2 (1G-FE)	90980-11875	K 2	Knock Sensor 2	
	Injector No.2 (2JZ-GE)	90980-11153	K 3	Kick Down SW	90980-11156
I 9	Injector No.3 (1G-FE)	90980-11875	L 1	License Plate Light LH	90980-11148
	Injector No.3 (2JZ-GE)	90980-11153	L 2	License Plate Light RH	
I10	Injector No.4 (1G-FE)	90980-11875	L 3	Light Failure Sensor	90980-10803
	Injector No.4 (2JZ-GE)	90980-11153	L 4	Luggage Compartment Door Courtesy SW and Opener Motor	90980-10825
I11	Injector No.5 (1G-FE)	90980-11875	L 5	Luggage Compartment Door Key Unlock SW	90980-11368
	Injector No.5 (2JZ-GE)	90980-11153	L 6	Luggage Compartment Door Opener Relay	90980-10171
I12	Injector No.6 (1G-FE)	90980-11875	L 7	Luggage Compartment Light (S/D)	90980-11148
	Injector No.6 (2JZ-GE)	90980-11153		Luggage Compartment Light (W/G)	90980-10121
I13	Intake Air Temp. Sensor	90980-11163	M 1	Multi-Display	90980-11877
I14	Ignition Key Cylinder Light	90980-10906	M 2	Moon Roof Control ECU	90980-10801
I15	Ignition SW	90980-11615	M 3	Moon Roof Control SW	90980-10367
I16	Interior Light	90980-10935		Personal Light	
I17	Interior Light	90980-11909	M 4	Multi-Display	90980-11923
	Radar Sensor		N 1	Neutral Start SW	90980-11784
I18	Igniter	90980-11653	N 2	Noise Filter (Ignition)	90980-10843
I19	Ignition Coil No.1	90980-11246	N 3	Navigation ECU	90980-11923
I20	Ignition Coil No.2		N 4	Navigation ECU	90980-11973
I21	Ignition Coil No.3		N 7	Noise Filter (Rear Window Defogger)	90980-11259
I22	Inner Mirror	90980-11950	N 8	Noise Filter (Stop Light)	90980-10825
J 1	Junction Connector	90980-11542	P 1	Power Steering Oil Pressure SW	90980-11428
J 2	Junction Connector	90980-11661	P 2	Parking Brake SW	90980-10871
J 3	Junction Connector		P 3	Personal Light	90980-10935
J 4	Junction Connector	90980-10803			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
P 4	Power Window Control SW Front LH	90980-10797	R14	Rear Speaker LH (S/D)	90980-11399
P 5	Power Window Control SW Front RH			Rear Speaker LH (W/G)	90980-10935
P 6	Power Window Control SW Rear LH		R15	Rear Speaker RH (S/D)	90980-11399
P 7	Power Window Control SW Rear RH			Rear Speaker RH (W/G)	90980-10935
P 8	Power Window Master SW	90980-11469	R16	Remote Control Mirror LH	90980-11922
P 9	Power Window Motor Front LH (LHD)	90980-11011	R17	Remote Control Mirror RH	
	Power Window Motor Front LH (RHD)	90980-10860	R18	Remote Control Mirror SW (Except South Korea)	90980-11450
P10	Power Window Motor Front RH (LHD)	90980-11011		Remote Control Mirror SW (South Korea)	90980-10801
	Power Window Motor Front RH (RHD)	90980-11011	R19	Rear Window Defogger	90980-11259
P11	Power Window Motor Rear LH	90980-10860	R20	Rear Window Defogger	
P12	Power Window Motor Rear RH		90980-11886	R21	Rear Wiper Motor
P13	Pretensioner LH	90980-11886		R22	Rear Wiper Motor
P14	Pretensioner RH		90980-10997	S 1	Speed Sensor (Combination Meter)
P15	Power Seat Control SW (Driver's Seat)	90980-10825		S 2	Speed Sensor (Transmission Input)
P16	Power Seat Motor (Driver's Seat Front Vertical Control)		S 3	Speed Sensor (Transmission Output)	
P17	Power Seat Motor (Driver's Seat Rear Vertical Control)		S 4	Starter	90980-11400
P18	Power Seat Motor (Driver's Seat Reclining Control)		S 5	Starter (1G-FE)	90980-09506
P19	Power Seat Motor (Driver's Seat Slide Control)	Starter (2JZ-GE)		90980-09531	
P20	Power Seat Control SW (Front Passenger's Seat)	90980-10997	S 6	Seat Heater SW (Driver's Seat)	90980-10797
P21	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	90980-10825	S 7	Seat Heater SW (Passenger's Seat)	
P22	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)		S 8	Shift Lock Control ECU	90980-11581
P23	Power Seat Motor (Front Passenger's Seat Reclining Control)		S 9	Stereo Component Amplifier	90980-10848
P24	Power Seat Motor (Front Passenger's Seat Slide Control)		S10	Stereo Component Amplifier	90980-11913
P25	Power Steering Oil Pressure Sensor	90980-10845	S11	Stop Light SW	90980-11118
P26	Pressure SW	90980-10943	S12	Seat Heater (Driver's Seat)	90980-10905
P27	Power Outlet	90980-11300	S13	Seat Heater (Passenger's Seat)	
P28	Power Outlet Relay	82660-20340	S14	Side Airbag Sensor LH	90980-11857
R 1	Radiator Fan Motor	90980-10928	S15	Side Airbag Sensor RH	
R 3	Radio and Player	90980-10803	S16	Side Airbag Squib LH	90980-11864
R 4	Radio and Player	90980-10996	S17	Side Airbag Squib RH	
R 5	Radio and Player	90980-10997	S18	Short Connector	90980-11538
R 6	Radio and Player	90980-12038	S19	Short Connector	90980-11539
R 7	Rear Fog Light SW	90980-11533	S20	Skid Control ECU	90980-11421
R 8	Remote Controller (Navigation)	90980-12012	S21	Skid Control ECU	90980-11476
R 9	Rheostat	90980-11296	S22	Skid Control ECU	90980-11637
R10	Rear Combination Light LH	90980-11587	S23	Skid Control ECU	90980-11638
R11	Rear Combination Light RH		S24	Steering Sensor	90980-11581
R12	Rear Fog Light LH	90980-10795	S25	Squawker LH	90980-11399
R13	Rear Fog Light RH		S26	Squawker RH	
			T 1	Throttle Control Motor	90980-10942
			T 2	Throttle Position Sensor	90980-10711
			T 4	Theft Deterrent ECU	90980-11392
			T 5	Theft Deterrent ECU	90980-11424
			T 6	Traction Cut SW	90980-11013

G PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
T 7	Transponder Key Amplifier (LHD)	90980-10789	V 6	VSC Warning Buzzer	90980-10906
	Transponder Key Amplifier (RHD)	90980-10933	W 1	Washer Motor	90980-10981
T10	Theft Warning Siren	90980-10942	W 2	Water Temp. Sensor (1G-FE)	90980-10737
T11	Traction Cut SW and Snow SW	90980-10933		Water Temp. Sensor (2JZ-GE)	90980-10736
T12	Transmission Control SW (L-2)	90980-11493	W 3	Water Temp. SW	90980-11235
U 1	Unlock Warning SW	90980-10795	W 4	Wireless Door Lock ECU	90980-11909
V 1	Vacuum Sensor	90980-10845	W 7	Wire to FFC Holder	82824-53010
V 2	VSV (ACIS)	90980-11149	W 8	Woofer	90980-10799
V 3	VSV (EVAP)	90980-11156	Y 1	Yaw Rate Sensor	90980-12080
V 4	Vanity Light LH	90980-11918			
V 5	Vanity Light RH				

Note: Not all of the above part numbers of the connector are established for the supply.